


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

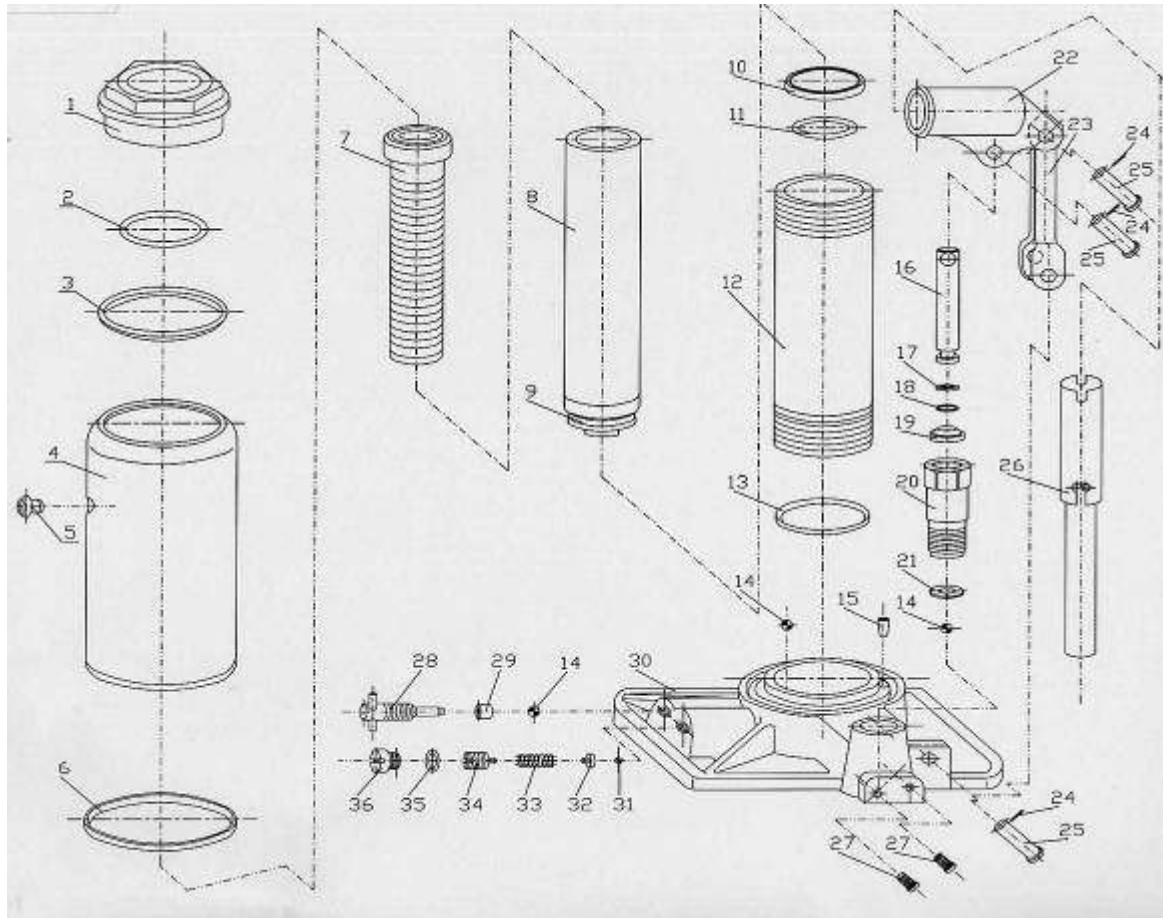

Y410600

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y410600-01	Top Nut	19	Y410600-19	Dust Wiper
2	Y410600-02	O-Ring	20	Y410600-20	Pump Cylinder
3	Y410600-03	Nylon Gasket	21	Y410600-21	Copper Gasket
4	Y410600-04	Oil Tank	22	Y410600-22	Handle Socket
5	Y410600-05	Oil Plug	23	Y410600-23	Linkage
6	Y410600-06	Square Seal	24	Y410600-24	Cotter Pin
7	Y410600-07	Extension Screw	25	Y410600-25	Axle
8	Y410600-08	Ram	26	Y410600-26	Handle Assembly
9	Y410600-09	Piston	27	Y410600-27	Oil Stopper
10	Y410600-10	U-cup Ring	28	Y410600-28	Release Valve
11	Y410600-11	O-Ring	29	Y410600-29	Square Seal
12	Y410600-12	Cylinder	30	Y410600-30	Base
13	Y410600-13	Square Seal	31	Y410600-31	Steel Ball
14	Y410600-14	Steel Ball	32	Y410600-32	Stud
15	Y410600-15	Dust Wiper	33	Y410600-33	Compression Spring
16	Y410600-16	Pump Plunger	34	Y410600-34	Pressure Screw
17	Y410600-17	Snap Ring	35	Y410600-35	O-Ring
18	Y410600-18	O Ring	36	Y410600-36	Safety Screw
			*	Y410600-RK	Repair Kit