


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

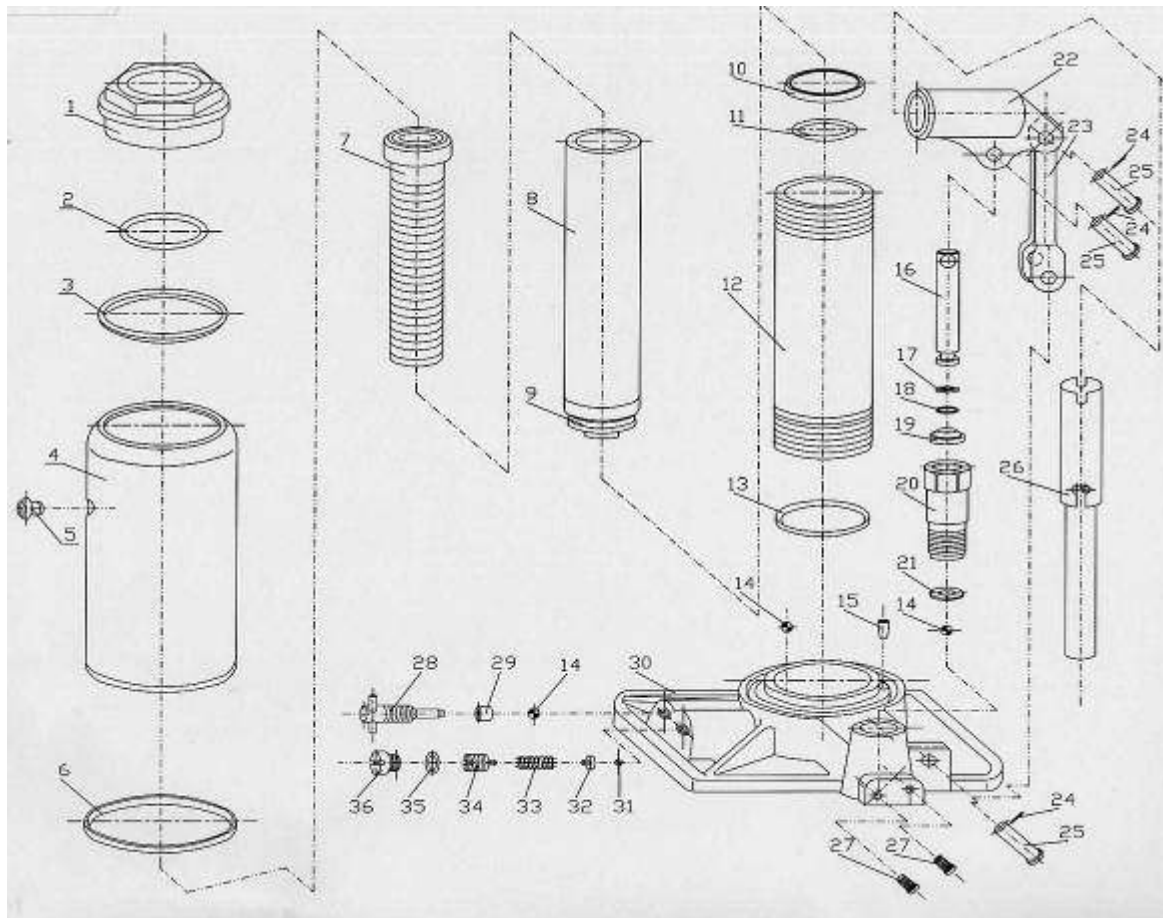

### Y410400

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y410400-01	Top Nut	19	Y410400-19	Dust Wiper
2	Y410400-02	O-Ring	20	Y410400-20	Pump Cylinder
3	Y410400-03	Nylon Gasket	21	Y410400-21	Copper Gasket
4	Y410400-04	Oil Tank	22	Y410400-22	Handle Socket
5	Y410400-05	Oil Plug	23	Y410400-23	Linkage
6	Y410400-06	Square Seal	24	Y410400-24	Cotter Pin
7	Y410400-07	Extension Screw	25	Y410400-25	Axle
8	Y410400-08	Ram	26	Y410400-26	Handle Assembly
9	Y410400-09	Piston	27	Y410400-27	Oil Stopper
10	Y410400-10	U-cup Ring	28	Y410400-28	Release Valve
11	Y410400-11	O-Ring	29	Y410400-29	Square Seal
12	Y410400-12	Cylinder	30	Y410400-30	Base
13	Y410400-13	Square Seal	31	Y410400-31	Steel Ball
14	Y410400-14	Steel Ball	32	Y410400-32	Stud
15	Y410400-15	Dust Wiper	33	Y410400-33	Compression Spring
16	Y410400-16	Pump Plunger	34	Y410400-34	Pressure Screw
17	Y410400-17	Snap Ring	35	Y410400-35	O-Ring
18	Y410400-18	O Ring	36	Y410400-36	Safety Screw
			*	Y410400-RK	Repair Kit